

PB-250

Serial Number

37000001-37001099


Last updated date

14/Nov/2020

TABLE OF CONTENTS

Cylinder, Crankcase, Piston.....	1
Starter, Magneto	3
Air Cleaner, Carbuertor, Muffler	5
Fuel Tank.....	7
Fan Case, Blower Pipe	9
Carburettor	11

Cylinder, Crankcase, Piston

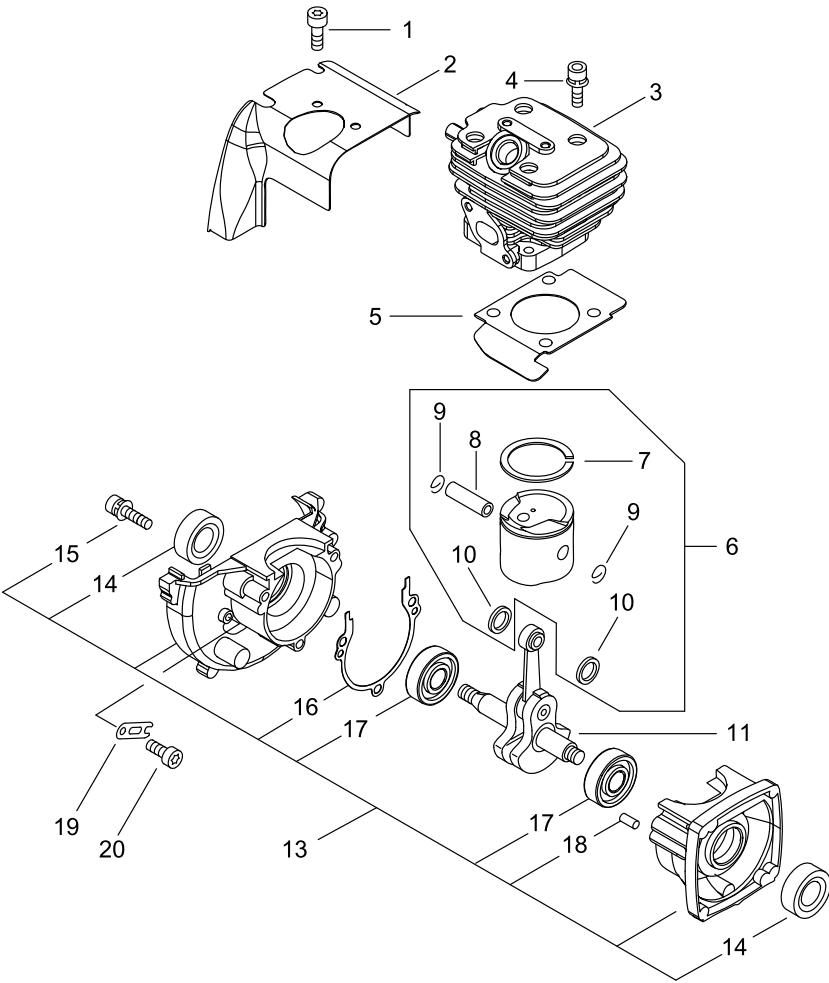


Cylinder, Crankcase, Piston

Key No.	LV (+)	Parts Number	Parts Description	Qty	Standard	Class
1		V805-000120	BOLT, TORX 5	2	TB-5*8 10.9	C
2		A160-001260	COVER,CYLINDER	1		C
3		A130-001020	CYLINDER	1		D
4		900162-05025	BOLT, H.S. 5*25	4	5*25 W,SW	
5		V100-000190	GASKET,CYL	1		B
6		P021-017410	PISTON KIT	1		
7	+	A101-000140	RING, PISTON	1	B1.2 T1.5	B
8	+	V606-000000	PIN,ENG 8	1	5*8*28	D
9	+	100015-04630	CIRCLIP, PISTON PIN	2		C
10	+	100014-11520	SPACER, PISTON PIN	2		C
11		A011-000590	CRANKSHAFT,ASY	1		D
13		P021-008231	CRANKCASE KIT	1		
14	+	100212-42031	OILSEAL	2	ISCD 12*22*4.5	C
15	+	900162-05028	BOLT, H.S. 5*28	3	5*28 W,SW	
16	+	100242-42030	GASKET, CRANKCASE	1		B
17	+	94035-36201	BEARING BALL	2	6201X3JR2C3	
18	+	100215-03930	PIN, DOWEL	2		C
19		V150-002400	PLATE,EYE	1		C
20		V805-000120	BOLT, TORX 5	1	TB-5*8 10.9	C

Class : Consumable class

A:Fast moving parts B:Semi-fast moving parts C:Slow moving parts D:Order only as needed

Starter, Magneto

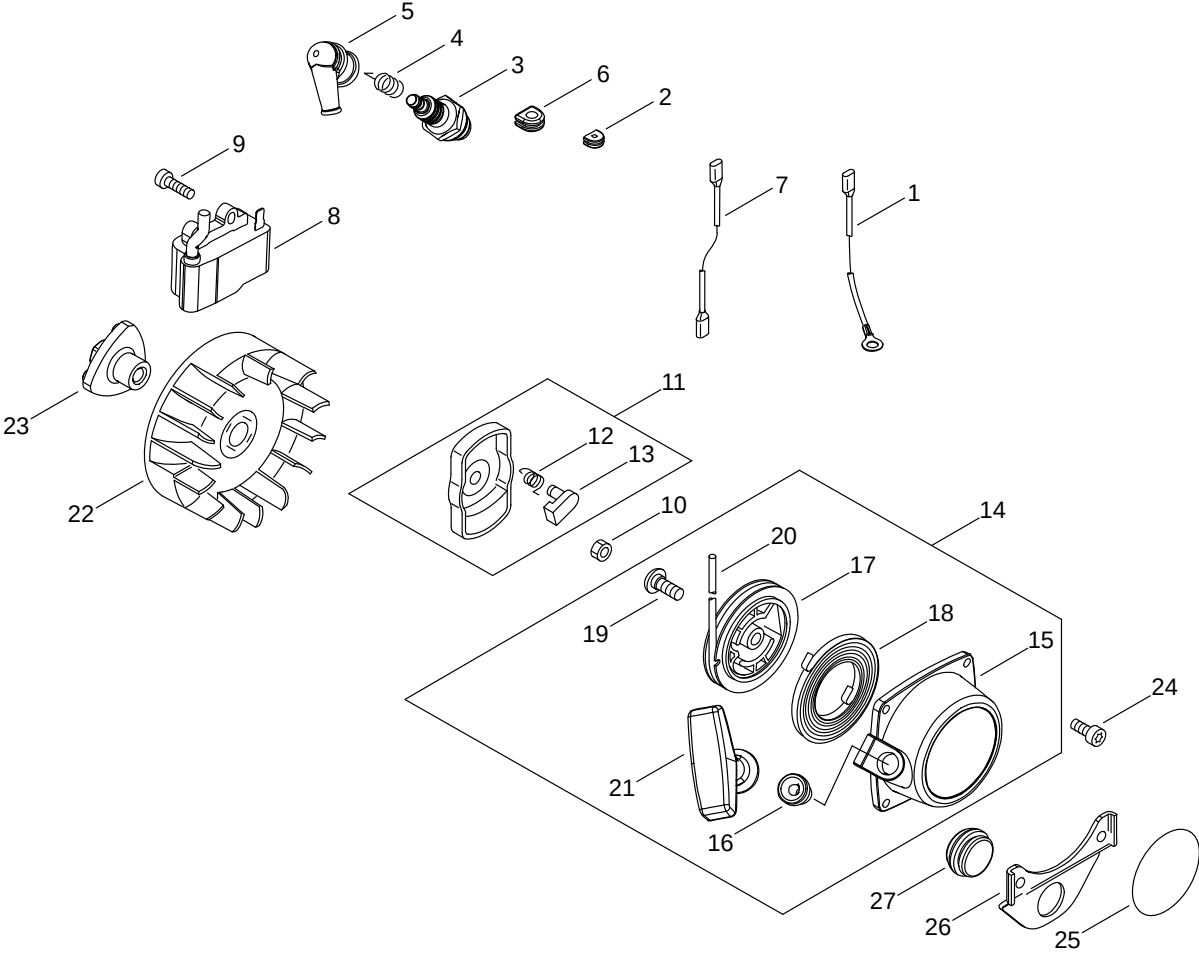


Starter, Magneto

Key No.	LV (+)	Parts Number	Parts Description	Qty	Standard	Class
1		V485-001210	LEAD	1	L:210	C
2		152115-05530	BUSHING	1		C
3		A425-000000	SPARKPLUG	1	BPMR8Y	A
4		159011-03432	COIL, SPARK PLUG	1		C
5		159012-03433	CAP, SPARK PLUG	1		C
6		156110-04920	BUSHING	1		C
7		V485-001220	LEAD	1	L:85	C
8		A411-000500	COIL, IGNITION	1		C
9		V804-000070	BOLT, TORX 4	2	TB-4*20 12.9	C
10		900595-00008	NUT	1	8	
11		A052-000280	PULLEY,ASM STARTER	1		C
12	+	177234-12220	SPRING, PAWL	1		
13	+	177218-44330	PAWL, STARTER	1	BLACK	
14		A051-000961	STARTER,RECOIL ASY	1	スターティング [®] 製	B
15	+	P022-038130	STARTER CASE	1		
16	+	P022-045770	GUIDE, ROPE	1		
17	+	P022-019691	DRUM, STARTER	1		
18	+	P022-019680	SPRING, SPIRAL	1		
19	+	177236-44330	SCREW	1		
20	+	177226-44330	ROPE, STARTER	1	3*1,000	
21	+	177228-06530	GRIP, STARTER	1		
22		A409-000210	ROTOR,MAGNETO	1		C
23		E101-000071	HUB,FAN	1	M8*1.25	C
24		V804-000060	BOLT, TORX 4	4	TB-4*16 10.9	C
25		X502-000330	LABEL,ECHO	1	ECHO	D
26		V152-002220	PLATE,ANGLE	1		C
27		V420-000910	CUSHION	1		B

Class : Consumable class

A:Fast moving parts B:Semi-fast moving parts C:Slow moving parts D:Order only as needed

Air Cleaner, Carbuertor, Muffler

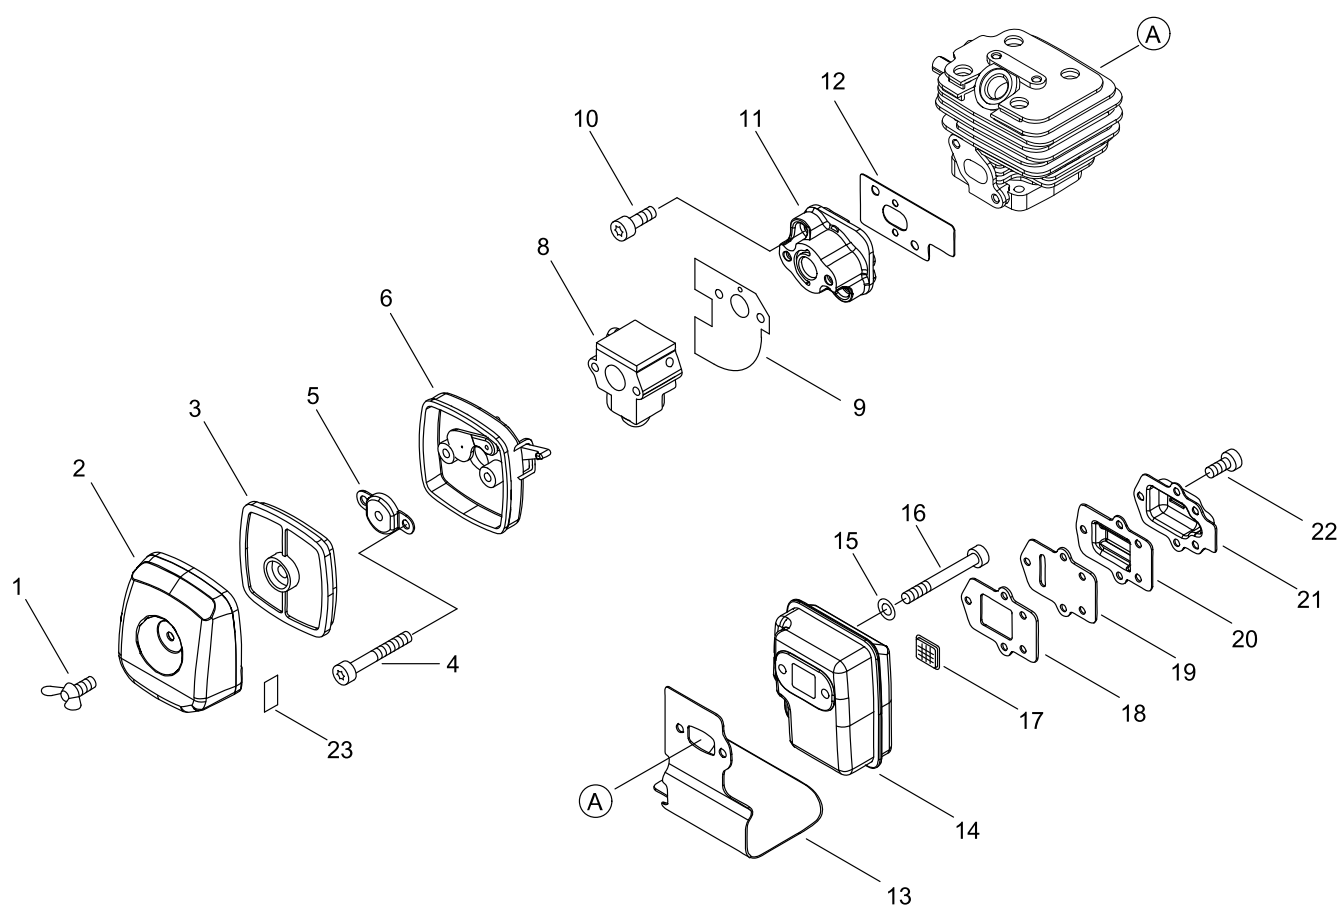


Air Cleaner, Carbuertor, Muffler

Key No.	LV (+)	Parts Number	Parts Description	Qty	Standard	Class
1		210417-52730	BOLT, WING	1	5*20	C
2		130313-05863	LID, AIR CLEANER	1		C
3		130310-54130	FILTER, AIR	1		A
4		V805-000100	BOLT, TORX 5	2	TB-5*65 10.9	C
5		129011-52730	PLATE, PREVENT	1		C
6		P021-000991	CASE, AIR CLEANER	1		
8		A021-001880	CARBURETOR,DIAPHRAGM	1	WTA-33	B
9		V103-000550	GASKET,INTAKE	1		A
10		V805-000220	BOLT, TORX 5	2	TB-5*25 12.9	C
11		A200-000370	INSULATOR, INTAKE	1		C
12		V103-000540	GASKET,INTAKE	1		A
13		V104-000960	GASKET,EXHAUST	1		A
14		A300-000810	MUFFLER, EXHAUST	1		C
15		900603-00005	WASHER 5	2	5.5*12*0.8	
16		V203-000190	BOLT,5	2	AN A2-70	C
17		A310-000070	SCREEN, ARRESTOR	1	22*28*3	B
18		V104-000940	GASKET,EXHAUST	1	T:0.5	A
19		A313-001070	GUIDE, EXHAUST	1		C
20		A313-000840	GUIDE, EXHAUST	1	20.5*3	C
21		A313-001090	GUIDE, EXHAUST	1		C
22		V804-000080	BOLT, TORX 4	5	TB4*8	C
23		890332-52730	LABEL, CHOKE	1		D

Class : Consumable class

A:Fast moving parts B:Semi-fast moving parts C:Slow moving parts D:Order only as needed

Fuel Tank

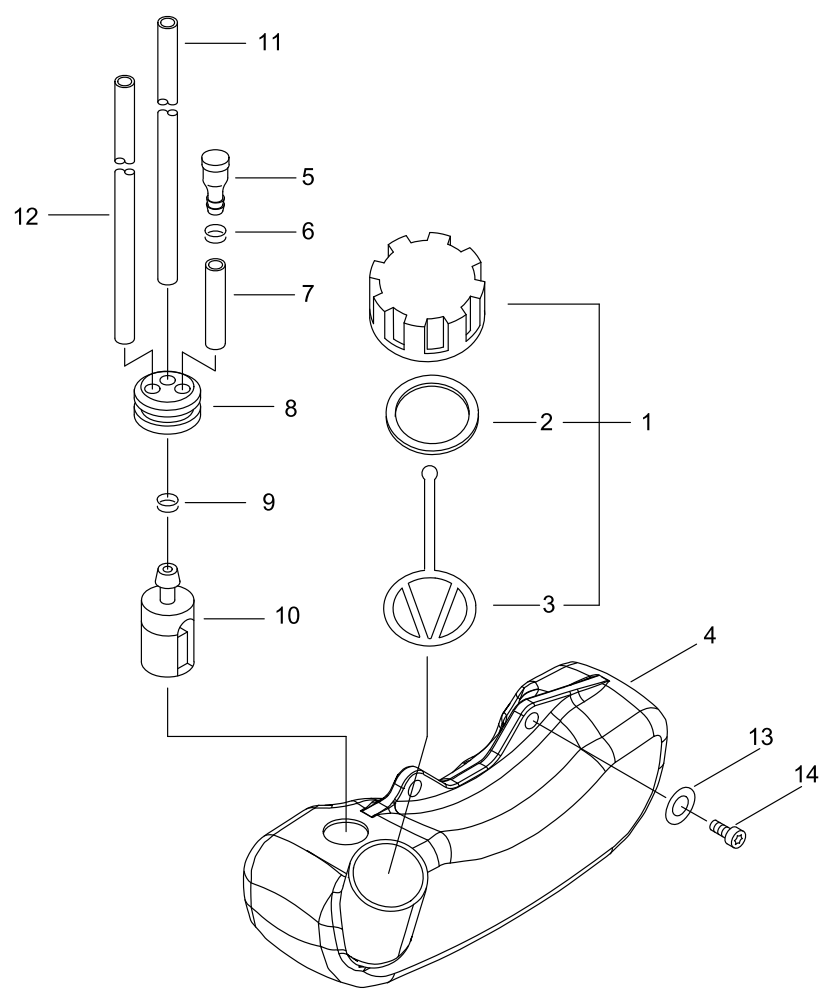


Fuel Tank

Key No.	LV (+)	Parts Number	Parts Description	Qty	Standard	Class
1		131004-55530	CAP ASSY, FUEL TANK	1		
2	+	131016-55830	GASKET, FUEL CAP	1		A
3	+	131051-56030	CLIP, FUEL CAP	1	100L	B
4		131005-20561	TANK, FUEL	1		C
5		A356-000030	VALVE,CHECK	1		B
6		132013-09820	CLIP	1	6MM	C
7		132012-04631	PIPE	1	3*5*80 NBR	C
8		V137-000030	GROMMET,FUEL	1		C
9		132013-09820	CLIP	1	6MM	C
10		131205-07320	STRAINER, FUEL	1		A
11		V471-002170	PIPE	1	3*5*230	C
12		132010-49730	PIPE 3*6*85	1	3*6*85 YL	C
13		900603-00005	WASHER 5	2	5.5*12*0.8	
14		V805-000150	BOLT, TORX 5	2	TB-5*16 10.9	C

Class : Consumable class

A:Fast moving parts B:Semi-fast moving parts C:Slow moving parts D:Order only as needed

Fan Case, Blower Pipe

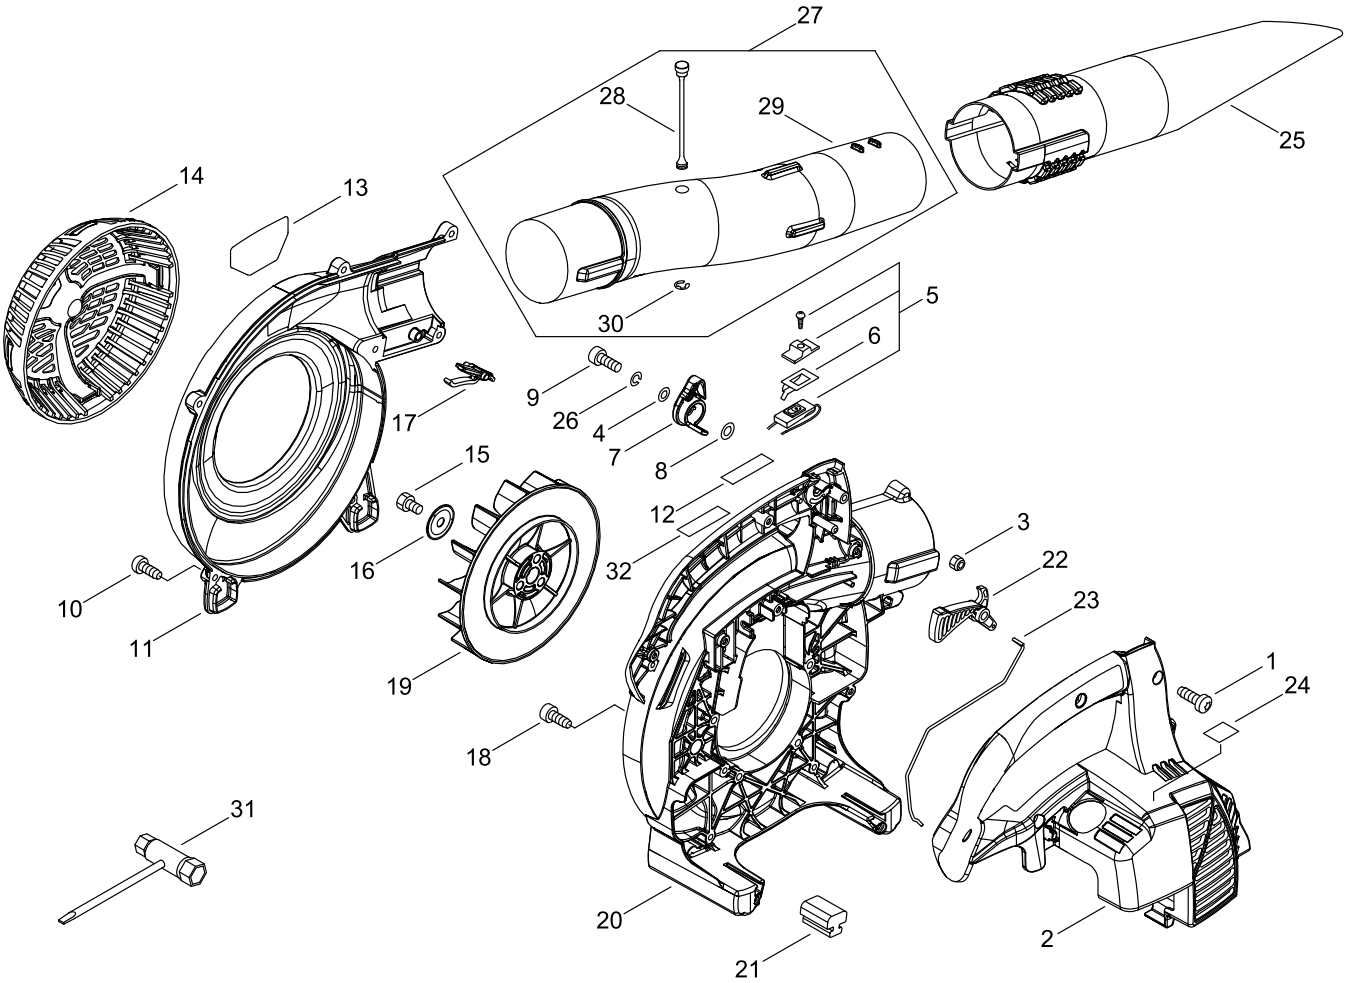


Fan Case, Blower Pipe

Key No.	LV (+)	Parts Number	Parts Description	Qty	Standard	Class
1		V805-000010	BOLT, TORX 5	6	TT-5*20 DG 10.9	C
2		P021-042970	ENGINE COVER ASY	1		
3		900562-50005	NUT, LOCK	1	5	
4		900602-00005	WASHER	1	5	
5		A440-001310	SWITCH, ON OFF	2		C
6		V486-000150	TERMINAL, LEAD	1		C
7		C453-000300	LEVER, THROTTLE	1		C
8		900603-00005	WASHER	1	5	
9		V805-000220	BOLT, TORX 5	1	TB-5*25 12.9	C
10		V805-000010	BOLT, TORX 5	7	TT-5*20 DG 10.9	C
11		E103-000700	CASE, FAN	1		C
12		X505-010790	LABEL, CAUTION	1		D
13		X547-001690	LABEL, ECHO	1		D
14		E104-000110	GRID, BLOWER	1		C
15		900100-08014	BOLT	1	8*14	
16		100143-19830	WASHER	1	8.2*31*0.8	C
17		C662-000040	PIECE, LEVER	1		C
18		V804-000070	BOLT, TORX 4	4	TB-4*20 12.9	C
19		E100-000070	FAN, BLOWER	1		C
20		E103-000690	CASE, FAN	1		C
21		351335-20560	CUSHION	2		B
22		C450-000410	CONTROL, THROTTLE	1		C
23		C454-000190	ROD, THROTTLE	1		C
24		X505-002310	LABEL, CAUTION	1	HOT CAUTION	D
25		E165-000170	PIPE, BLOWER	1		B
26		900605-00005	WASHER, SPRING	1	5	
27		E165-000380	PIPE, BLOWER	1		B
28	+	E178-000050	GUARD, PIPE	1		D
29	+	E165-000390	PIPE, BLOWER	1		B
30	+	V583-000080	RING	1	CE-5	C
31		895410-06960	WRENCH, W/S-DRIVER	1		D
32		X505-007910	LABEL, CAUTION	1		D

Class : Consumable class

A:Fast moving parts B:Semi-fast moving parts C:Slow moving parts D:Order only as needed

Carburettor

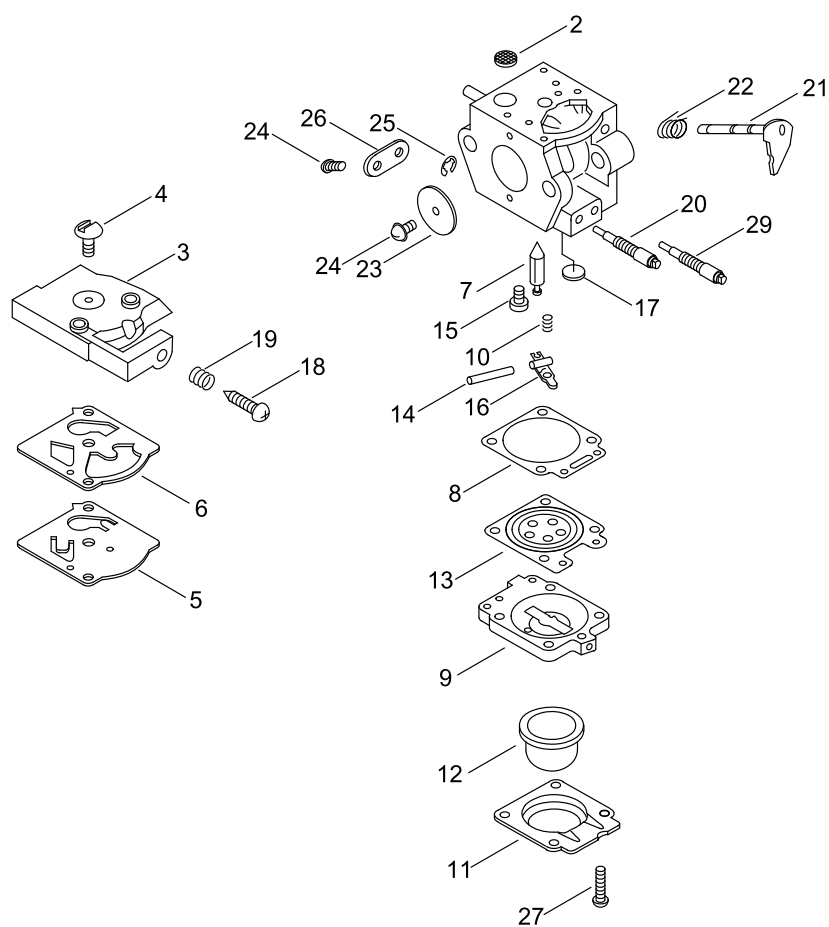

Carburettor

Key No.	LV (+)	Parts Number	Parts Description	Qty	Standard	Class
		A021-001880	CARBURETOR,DIAPHRAGM	1	WTA-33	B
2	+	123126-10631	SCREEN, INLET	1		
3	+	P003-003830	COVER PUMP	1		
4	+	123110-03930	SCREW, PUMP COVER	1		
5	+	123112-15030	DIAPHRAGM, FUEL PUMP	1		
6	+	123125-15030	GASKET, FUEL PUMP	1		
7	+	123137-19830	VALVE, INLET NEEDLE	1		
8	+	P003-003840	GASKET, M. DIAPHRAGM	1		
9	+	P003-003850	BODY, AIR PURGE	1		
10	+	P003-003860	SPRING	1		
11	+	123142-05560	COVER, PRIMER PUMP	1		
12	+	123181-40630	PUMP, PRIMER	1		
13	+	P003-001850	DIAPHRAGM, METERING	1		
14	+	123138-03930	PIN, METERING LEVER	1		
15	+	123139-03930	SCREW, M. LEVER PIN	1		
16	+	123123-03930	LEVER, METERING	1		
17	+	123146-10631	PLUG, WELCH	1		
18	+	P003-001400	SCREW, IDLE ADJUST	1		
19	+	123133-04260	SPRING, IDLE ADJUST	1		
20	+	P003-003870	NEEDLE	1		D
21	+	P003-003880	SHAFT ASY,THROTTLE	1		
22	+	P003-003890	SPRING	1		
23	+	P003-003900	VALVE, THROTTLE	1		
24	+	123114-38830	SCREW	2		
25	+	123127-15030	RING	1		
26	+	P003-003910	THROTTLE, LEVER	1		
27	+	123144-02960	SCREW	4		
29	+	P003-003920	NEEDLE	1		D

Class : Consumable class

A:Fast moving parts B:Semi-fast moving parts C:Slow moving parts D:Order only as needed

NUMERICAL PARTS INDEX

Part No	Part description	Page	Part No	Part description	Page	Part No	Part description	Page
100014-11520	SPACER, PISTON PIN	2	895410-06960	WRENCH, W/S-DRIVER	10	P003-001400	SCREW, IDLE ADJUST	12
100015-04630	CIRCLIP, PISTON PIN	2	900100-08014	BOLT	10	P003-001850	DIAPHRAGM, METERING	12
100143-19830	WASHER	10	900162-05025	BOLT, H.S. 5*25	2	P003-003830	COVER PUMP	12
100212-42031	OILSEAL	2	900162-05028	BOLT, H.S. 5*28	2	P003-003840	GASKET, M. DIAPHRAGM	12
100215-03930	PIN, DOWEL	2	900562-50005	NUT, LOCK	10	P003-003850	BODY, AIR PURGE	12
100242-42030	GASKET, CRANKCASE	2	900595-00008	NUT	4	P003-003860	SPRING	12
123110-03930	SCREW, PUMP COVER	12	900602-00005	WASHER	10	P003-003870	NEEDLE	12
123112-15030	DIAPHRAGM, FUEL PUMP	12	900603-00005	WASHER 5	6	P003-003880	SHAFT ASY,THROTTLE	12
123114-38830	SCREW	12	900603-00005	WASHER 5	8	P003-003890	SPRING	12
123123-03930	LEVER, METERING	12	900603-00005	WASHER	10	P003-003900	VALVE, THROTTLE	12
123125-15030	GASKET, FUEL PUMP	12	900605-00005	WASHER, SPRING	10	P003-003910	THROTTLE, LEVER	12
123126-10631	SCREEN, INLET	12	94035-36201	BEARING BALL	2	P003-003920	NEEDLE	12
123127-15030	RING	12	A011-000590	CRANKSHAFT,ASY	2	P021-000991	CASE, AIR CLEANER	6
123133-04260	SPRING, IDLE ADJUST	12	A021-001880	CARBURETOR, DIAPHRAGM	6	P021-008231	CRANKCASE KIT	2
123137-19830	VALVE, INLET NEEDLE	12	A021-001880	CARBURETOR, DIAPHRAGM	12	P021-017410	PISTON KIT	2
123138-03930	PIN, METERING LEVER	12	A051-000961	STARTER,RECOIL ASY	4	P021-042970	ENGINE COVER ASY	10
123139-03930	SCREW, M. LEVER PIN	12	A052-000280	PULLEY,ASM STARTER	4	P022-019680	SPRING, SPIRAL	4
123142-05560	COVER, PRIMER PUMP	12	A101-000140	RING, PISTON	2	P022-019691	DRUM, STARTER	4
123144-02960	SCREW	12	A130-001020	CYLINDER	2	P022-038130	STARTER CASE	4
123146-10631	PLUG, WELCH	12	A160-001260	COVER,CYLINDER	2	P022-045770	GUIDE, ROPE	4
123181-40630	PUMP, PRIMER	12	A200-000370	INSULATOR, INTAKE	6	V100-000190	GASKET,CYL	2
129011-52730	PLATE, PREVENT	6	A300-000810	MUFFLER, EXHAUST	6	V103-000540	GASKET,INTAKE	6
130310-54130	FILTER, AIR	6	A310-000070	SCREEN, ARRESTOR	6	V103-000550	GASKET,INTAKE	6
130313-05863	LID, AIR CLEANER	6	A313-000840	GUIDE, EXHAUST	6	V104-000940	GASKET,EXHAUST	6
131004-55530	CAP ASSY, FUEL TANK	8	A313-001070	GUIDE, EXHAUST	6	V104-000960	GASKET,EXHAUST	6
131005-20561	TANK, FUEL	8	A313-001090	GUIDE, EXHAUST	6	V137-000030	GROMMET,FUEL	8
131016-55830	GASKET, FUEL CAP	8	A356-000030	VALVE,CHECK	8	V150-002400	PLATE,EYE	2
131051-56030	CLIP, FUEL CAP	8	A409-000210	ROTOR,MAGNETO	4	V152-002220	PLATE,ANGLE	4
131205-07320	STRAINER, FUEL	8	A411-000500	COIL, IGNITION	4	V203-000190	BOLT,5	6
132010-49730	PIPE 3*6*85	8	A425-000000	SPARKPLUG	4	V420-000910	CUSHION	4
132012-04631	PIPE	8	A440-001310	SWITCH, ON OFF	10	V471-002170	PIPE	8
132013-09820	CLIP	8	C450-000410	CONTROL, THROTTLE	10	V485-001210	LEAD	4
152115-05530	BUSHING	4	C453-000300	LEVER,THROTTLE	10	V485-001220	LEAD	4
156110-04920	BUSHING	4	C454-000190	ROD, THROTTLE	10	V486-000150	TERMINAL,LEAD	10
159011-03432	COIL, SPARK PLUG	4	C662-000040	PIECE, LEVER	10	V583-000080	RING	10
159012-03433	CAP, SPARK PLUG	4	E100-000070	FAN,BLOWER	10	V606-000000	PIN,ENG 8	2
177218-44330	PAWL, STARTER	4	E101-000071	HUB,FAN	4	V804-000060	BOLT, TORX 4	4
177226-44330	ROPE, STARTER	4	E103-000690	CASE,FAN	10	V804-000070	BOLT, TORX 4	4
177228-06530	GRIP, STARTER	4	E103-000700	CASE,FAN	10	V804-000070	BOLT, TORX 4	10
177234-12220	SPRING, PAWL	4	E104-000110	GRID, BLOWER	10	V804-000080	BOLT, TORX 4	6
177236-44330	SCREW	4	E165-000170	PIPE,BLOWER	10	V805-000010	BOLT, TORX 5	10
210417-52730	BOLT, WING	6	E165-000380	PIPE,BLOWER	10	V805-000100	BOLT, TORX 5	6
351335-20560	CUSHION	10	E165-000390	PIPE,BLOWER	10	V805-000120	BOLT, TORX 5	2
890332-52730	LABEL, CHOKE	6	E178-000050	GUARD,PIPE	10	V805-000150	BOLT, TORX 5	8
						V805-000220	BOLT, TORX 5	6

NUMERICAL PARTS INDEX

Part No	Part description	Page
V805-000220	BOLT, TORX 5	10
X502-000330	LABEL,ECHO	4
X505-002310	LABEL,CAUTION	10
X505-007910	LABEL,CAUTION	10
X505-010790	LABEL,CAUTION	10
X547-001690	LABEL,ECHO	10